# Air Checker: New **Electronic Pressure Switch (**


Applicable fluid: Air, Non-corrosive gas, Non-flammable gas


PS1000 For Positive Pressure

PS1100 For Vacuum, Residual Pressure

\$1200 For Vacuum

Compact/lightweight electronic pressure switch

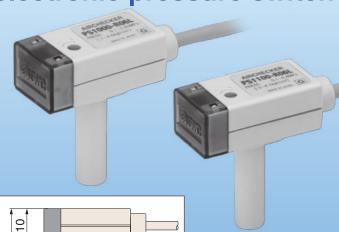

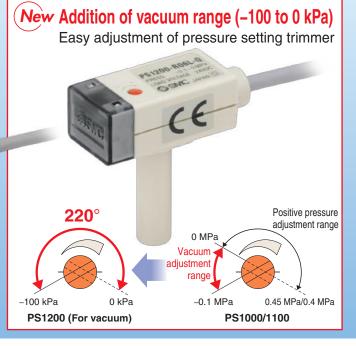

# 30 30 PS1000-R06L

## **Specifications**

 
Find the operation manual on our website www.smc.eu for specific product precautions.

## 2-wire type

Applicable to either NPN or PNP output

### **Easy mounting**

Plug-in reducer port for One-touch fittings



## **High visibility**


A large LED display for an easily visible switch

Model	PS1000	PS1100	PS1200
Switch output	Present pres. ≥ Setting pres.: ON	Present pres. ≤ S	Setting pres.: ON
Max. operating pressure	1 MPa		500 kPa
Set pressure range	-0.1 to 0.45 MPa	-0.1 to 0.4 MPa	-100 to 0 kPa
Fluid	Air/Non-corrossive gas/Non-flammable gas		
Indicator light	ON: When red LED turns on		
Temperature characteristics	±3% F.S.		
Repeatability	±1% F.S.		
Hysteresis	4% F.S. or less		10% F.S. or less
Load voltage	12 to 24 VDC ±10%, Ripple (p-p) 10% or less		
Load current	5 to 40 mA		
Leakage current	1 mA or less		
Internal voltage drop	5 V or less		
Operating temperature range	0 to 60°C (No condensation)		
Insulation resistance	$2~\text{M}\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing		
Withstand voltage	1000 VAC (in 50/60 Hz) for 1 minute between terminals and housing		
Weight	5 g (Excluding lead wire)		
Port size	R06: ø6 reducer, R07: 1/4" reducer		
Enclosure	IP40		
Lead wire Note)	Grommet oil-resistant vinyl cabtire code 2 cores, ø2.55, 3 m, Cross section: 0.18 mm², Insulator O.D.: 0.96 mm		
Wetted parts material	Pressured sensor part: Silicon, Body part: PBT, O-ring: HNBR		
Standards	CE (Option), RoHS		

Note) For wiring, refer to the Operation Manual on our website, http://www.smc.eu






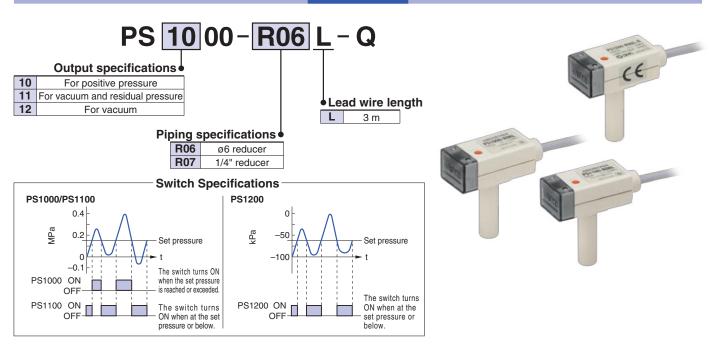

#### Setting of Pressure Switch

 - Use the pressure setting trimmer to set ON pressure.
- Rotate clockwise to increase the set pressure. For setting vacuum, rotate counterclockwise.
- · To set, use a flat head screwdriver suited for the groove of the trimmer, and rotate it lightly with finger tip.



#### Trimmer

Rotation angle of the trimmer is 220°.

There is a stop provided to prevent the trimmer from rotating beyond its limits. Rotation beyond the limit can damage the trimmer. Adjust the trimmer gently within the rotation angle.








Left end adjustment limit Right end adjustment limit

#### **Dimensions**

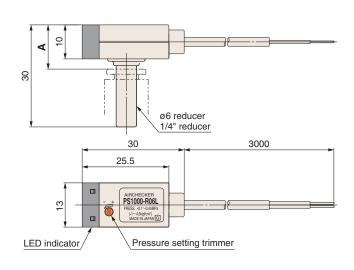

#### **Dimensions**

Applicable One-touch	fittings A		
KQ2H/L/T/S/Y06-M5	16		
KQ2H/L07-M5	16		
Other Series KQ2/KS	13		
Series KJ	16		

# **SMC** Corporation

#### SMC CORPORATION

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362 SMC CORPORATION All Rights Reserved

Zuazobidea 14, 01015 Vitoria Tel: +34 945-184 100 Fax: +34 945-184 124 URL http://www.smc.eu